



OWNERS MANUAL

Versa Single-Station Strength VS-S23 Converging Shoulder Press

Safety, General Care & Maintenence	3
Getting Started (Product Specifications)	5
Assembly Information	6
Markings	7
Parts List	8

Installation & Assembly: Value Line	
Part 1 Weight Stack to User Frame Assembly	10
Part 2 Arm Assembly	12
Part 3 Cable Assembly	14
Part 4 Seat Pad Assembly	
Part 5 Plastics Assembly	

Installation & Assembly: Optional Kits	
Part 6 Premium Kit Assembly	23
Part 7 Short User Kit	31

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

It is the sole responsibility of the purchaser of Matrix products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Matrix exercise equipment be informed of the following information prior to its use.

PROPER USAGE

Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that Matrix equipment be used properly to avoid injury.

Keep hands and feet clear at all times from moving parts to avoid injury.

CHECK FOR DAMAGED PARTS

- 1. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local Matrix dealer.
- 2. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your Matrix dealer for a replacement.
- 3. SECURING EQUIPMENT: Manufacturer recommends that all stationary MATRIX strength equipment be secured to the floor to stabilize equipment and eliminate rocking or tipping over. This must be performed by a licensed contractor.

All anchor points must be able to withstand 750 lbs. (3.3 kN) pull-out force.

- 4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your li-ability to a minimum. Equipment needs to be inspected at regular intervals.
- 5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. Matrix dealers will provide service and maintenance training at our corporate facility upon request.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO AVOID INJURY!

- 1. Never allow children on strength training equipment. Teenagers must be supervised at all times while using this equipment.
- 2. All warnings and instructions should be read and proper instruction obtained prior to use.
- 3. Use this equipment for its intended purposes only.
- 4. NEVER allow resistance straps, ropes or other means be attached to this equipment, as this may result in serious injury.
- 5. NEVER use this equipment for support during stretching, as this may result in serious injury.
- 6. Cease exercise if you feel faint or dizzy. Obtain a medical exam before beginning an exercise program.
- 7. Keep body, hair, clothing and accessories free and clear of all moving parts.
- 8. Inspect the machine before use. DO NOT use machine if it appears damaged or inoperable.
- 9. Check to see that the selector pin is completely inserted into the weight stack.
- 10. NEVER use this machine with the weight stack pinned in an elevated position.
- 11. NEVER use dumbells or other means to incrementally increase the weight resistance. Only use the means provided directly from the manufacturer.
- 12. This equipment should only be used in supervised areas where access and control are regulated by the owner.

GETTING STARTED

EXERCISE PLACARD | PRODUCT SPECIFICATIONS | MAINTENANCE CHECKLIST

EXERCISE PLACARD



PRODUCT SPECIFICATIONS

TECH SPECS	
Overall dimensions	61"L X 57"W X 66"H
Weight	Light Stack = 538 lbs (245 kg), Heavy Stack = 608 lbs (276 kg)
Shipping weight	402 lbs (182 kg)

WARRANTY (Valid in USA only)		
Frame (not coatings)	10 years	
Structural parts	10 years	
Weight stacks	5 years	
Pulleys	5 years	
Pivot bearings	5 years	
Any items not specified	3 years	
Labor (excluding upholstery/cables/grips)	3 years	
Upholstery/cables/grips/springs	1 year	

MAINTENANCE CHECKLIST

ACTION	FREQUENCY
Clean Upholstery	Daily
Inspect Cables	Daily
Clean Guide Rods	Monthly
Inspect Hardware	Monthly
Inspect Frame	Bi-Annually
Clean Machine	As Needed
Clean Grips	As Needed
Lubricate Guide Rods	As Needed

Upholstery & Grips should be cleaned with a non-ammonia based cleaner or a mild soap and water. Guide rods should be lubricated with Teflon based lubricant. Apply the lubricant to a cotton cloth and then apply up and down the guide rods.

UNPACKING

Thank you for purchasing a Matrix product. This machine is an EN957-1 and EN957-2 compliant Class S product. Your Matrix product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the exploded diagrams. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.


CAUTION

The weight of the product is 402 lbs. (182 kg) not including the weight stack. The standard weight stack for this machine is 160 lbs. (73 kg) & the heavy stack is 230 lbs. (104kg). To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine. Maximum user weight for this machine is 300 lbs.

TOOLS REQUIRED FOR ASSEMBLY

- 3MM L-Shaped Allen Wrench
 4MM L-Shaped Allen Wrench
 5MM L-Shaped Allen Wrench
 6MM L-Shaped Allen Wrench
 8MM L-Shaped Allen Wrench
 10MM L-Shaped Allen Wrench
 Phillips & Standard Screwdrivers
 8MM Open-End Wrench
 13MM Open-End Wrench
 17MM Open-End Wrench.
 19MM Open-End Wrench
 Adjustable Wrench

Blue Locktite 242 must be used on all fasteners that are not assembled with Nylock Nuts

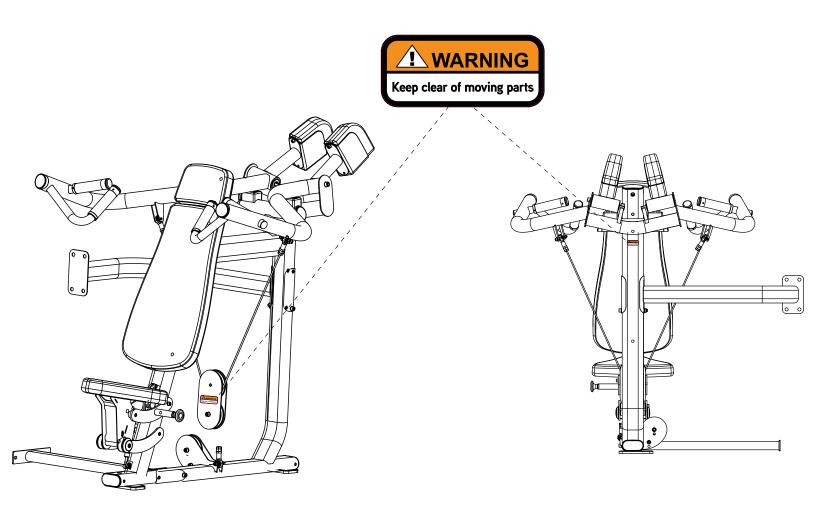

Parts List

ID	DESCRIPTION	QTY
1	Weight Stack	1
2	M10 Flat Washer	18
3	M10 X 20L Socket Head Cap Screw	6
4	Lower Connecting Tube	1
5	M10 Nylock Nut	4
6	User Frame	1
7	Wide Cupped Flange	2
8	M10 X 125L Socket Head Cap Screw	4
9	Upper Connecting Tube	1
10	Right Arm Assembly	1
11	Left Arm Assembly	1
12	M12 Large Flat Washer (Ø40 mm)	4
13	Belleville Washer	2
14	M10 X 30L Socket Head Cap Screw	2
15	Ø20 mm Shaft	2
16	Counter Weight	2
17	M8 Flat Washer	4
18	M8 X 20L Socket Head Cap Screw	4
19	M12 Flat Washer	2
20	M12 X 25L Socket Head Cap Screw	2
21	Pulley (Ø3.5")	10
22	M10 X 50L Socket Head Cap Screw	3
23	Floating Pulley Plate	2
24	M8 X 45L Socket Head Cap Screw	1
25	M8 Nylock Nut	3
26	Cable Tie Rod End	3
27	User Frame Cable	1
28	M8 X 50L Socket Head Cap Screw	2
29	Head Pad	1

Parts List

ID	DESCRIPTION	QTY
30	Back Pad	1
31	M10 X 75L Socket Head Cap Screw	4
32	Bottom Pad	1
33	M10 X 20L Hex Bolt	4
34	Front Shroud	1
35	Rear Shroud	1
36	M8 X 25L SHC	4
37	M8 Flat Washer (Ø20 mm)	4
38	Тор Сар	1
39	Top Cap Cover	2
	PREMIUM KIT COMPONENTS	
1P	Wing	1
2P	Rep Counter	1
3P	Towel Hook	1
4P	ASG Push Grip	2
5P	Premium Pullpin	1
6P	Seat Assist Gas Shock	1
7P	M10 Nylock Nut	1
	SHORT USER KIT	
1SK	M10 X 18L SHC	2
2SK	M10 Flat Washer	4
3SK	Coupler Plate	2
4SK	M10 X 18L Hex Bolt	2
5SK	Foot Rest	1


ASSEMBLY

PART 1: USER FRAME ASSEMBLY

STEP 1 | USER FRAME INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
1	Weight Stack	1
2	M10 Flat Washer	6
3	M10 X 20L SHC	2
4	Lower Connecting Tube	1
5	M10 Nylock Nut	2
6	User Frame	1
7	Wide Cupped Flange	1
8	M10 X 125L SHC	2

Install the user frame hardware as shown, but DO NOT FULLY TIGHTEN .

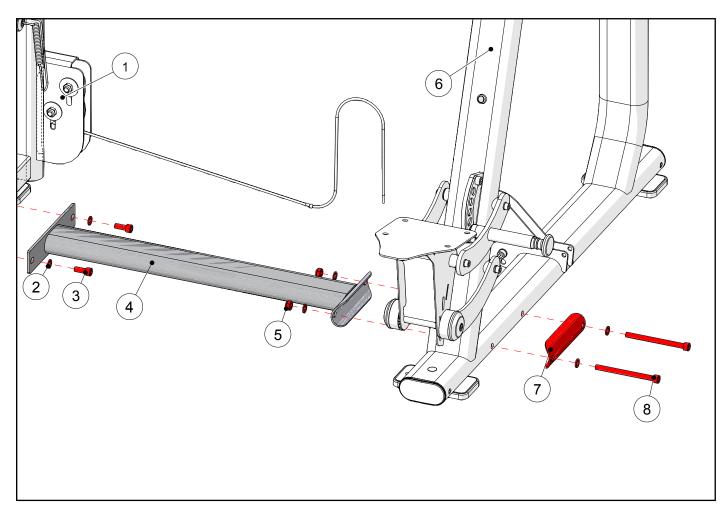


ASSEMBLY

PART 1: USER FRAME ASSEMBLY

STEP 2 | USER FRAME ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	8
3	M10 X 20L SHC	4
5	M10 Nylock Nut	2
7	Wide Cupped Flange	1
8	M10 X 125L SHC	2
9	Upper Connecting Tube	1

Install the user frame hardware as shown. Torque all M10 hardware from pages 10 & 11 to: 77 N-m/57 ft-lbs.

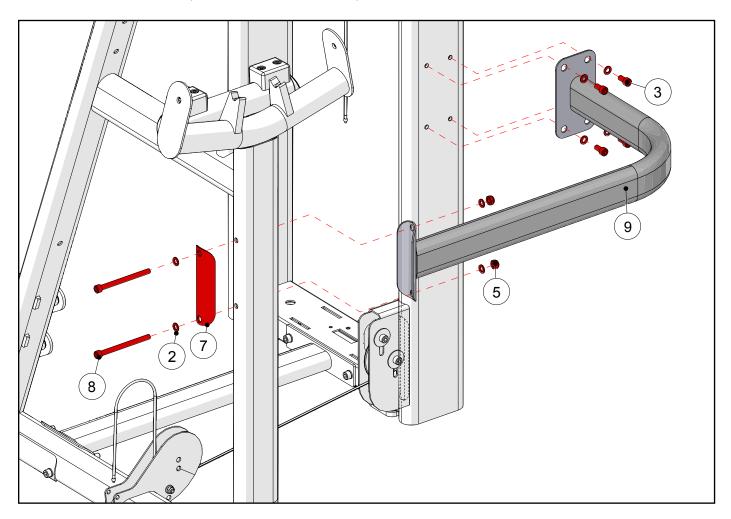


PART 2: ARM ASSEMBLY

STEP 1 | RIGHT & LEFT ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
10	Right Arm Assembly	1
11	Left Arm Assembly	1
12	40mm Diameter Flat Washer	4
13	Belleville (Spring) Washer	2
14	M10 X 30L SHC	2
15	20 mm Diameter Shaft	2
16	Counter Weight	2
17	M8 Flat Washer	4
18	M8 X 20L SHC	4

Attach the arms to the frame using the hardware shown, but DO NOT FULLY TIGHTEN

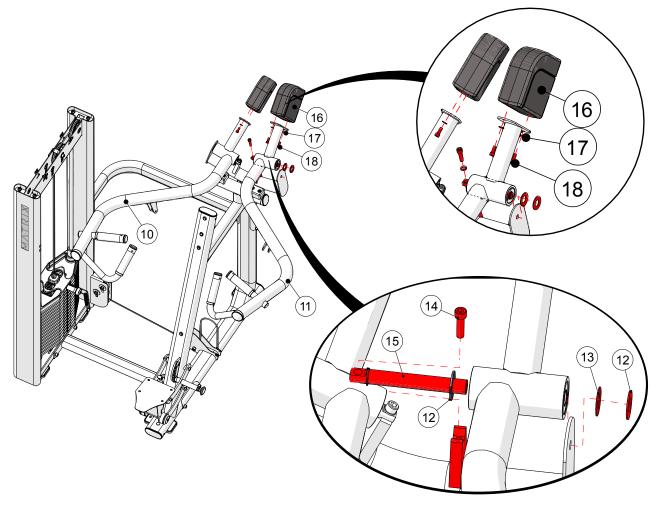


Belleville washer, item 13, must be assembled with inner (convex) diameter contacting the bearing. The outer diameter and concave side of Belleville washer contacts the outer washer item 12.



PART 2: ARM ASSEMBLY

STEP 2 | RIGHT & LEFT ARM ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
19	M12 Flat Washer	2
20	M12 X 25L SHC	2

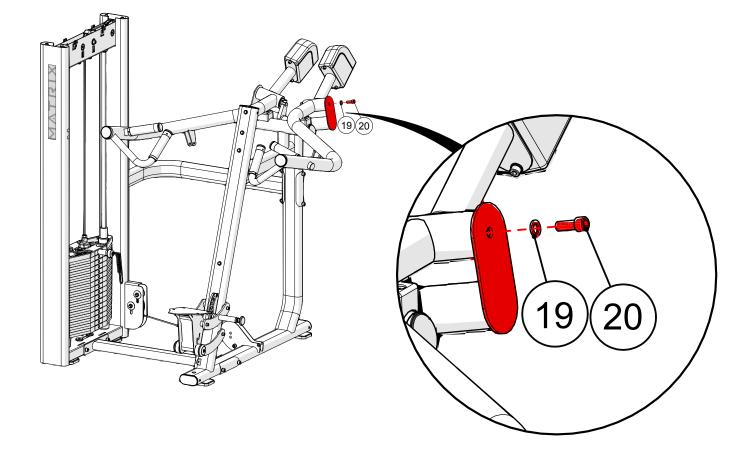

Install the pivot cap screw as shown. Torque all arm hardware to:


- M10 from step 1 to 77 N-m/57 ft-lbs.
- M12 from step 2 to 136 N-m/100 ft-lbs.



PART 3: CABLE ASSEMBLY

STEP 1 | WEIGHT STACK CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	4
5	M10 Nylock Nut	2
21	Pulley	3
22	M10 X 50L SHC	2
23	Floating Pulley Plate	2

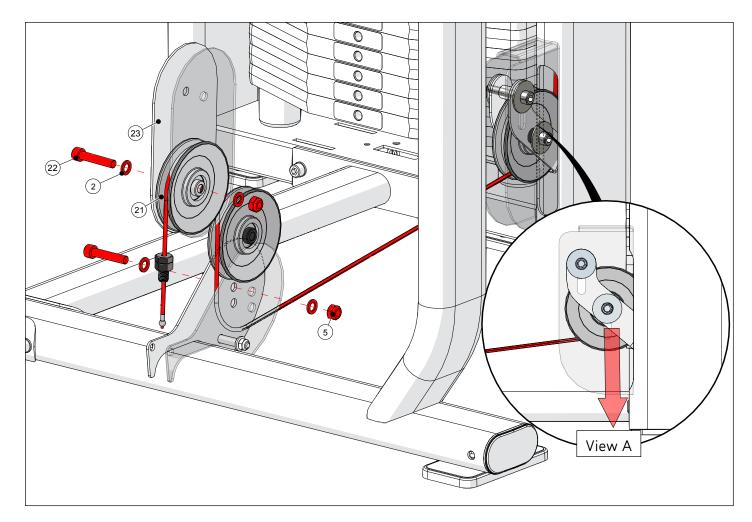


Cable tension is adjusted by raising or lowering pulley as shown in View A. Note: Nuts for adjustable pulley must be on inside towards weight plates.



PART 3: CABLE ASSEMBLY

STEP 2 | WEIGHT STACK CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
18	M8 Flat Washer	2
24	M8 X 45L SHC	1
25	M8 Nylock Nut	1
26	Cable Tie Rod End	1

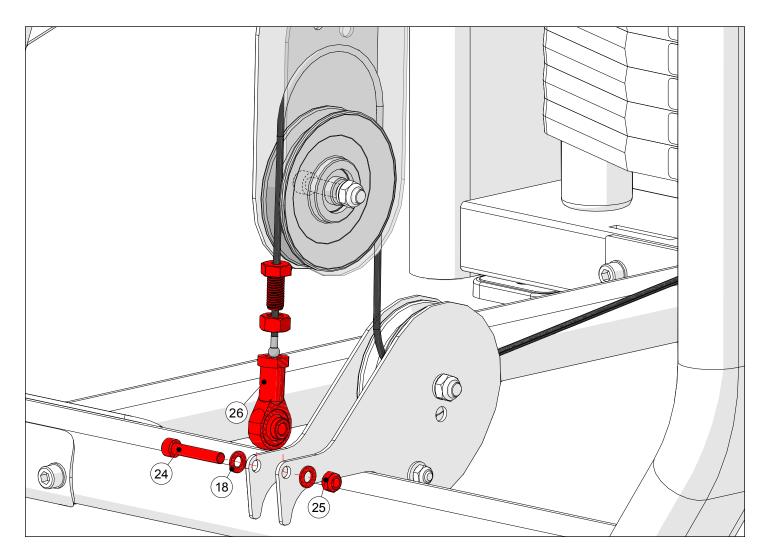


Fully thread cable bolt into tie-rod, then attach to frame. Torque M8 hardware to: 39 N-m/29 ft-lbs.



PART 3: CABLE ASSEMBLY

STEP 3 | USER FRAME CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	1
5	M10 Nylock Nut	1
21	Pulley	1
22	M10 X 50L SHC	1
27	User Frame Cable	1

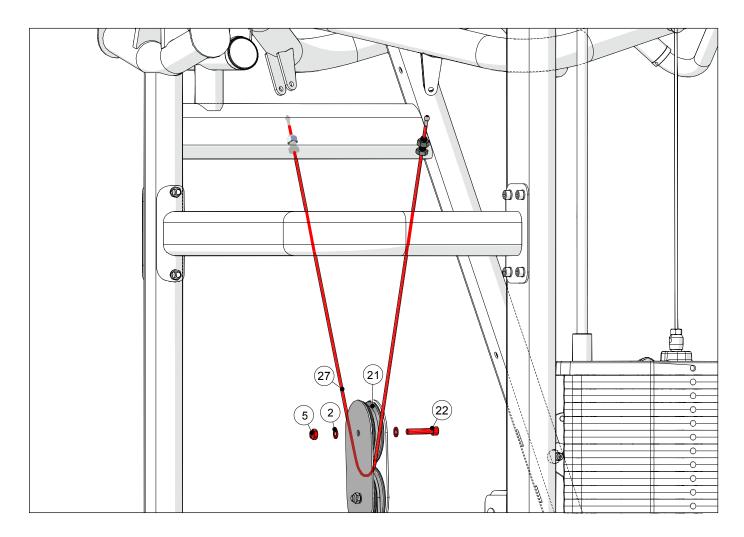


Install the secondary cable pulleys as shown. Torque hardware to: 77 N-m/57 ft-lbs.



STEP 4 | USER FRAME CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
18	M8 Flat Washer	4
25	M8 Nylock Nut	2
26	Cable Tie Rod End	2
28	M8 X 50L SHC	2

*Note: Image shows left arm assembly only, though quantities reflect both left and right arm assemblies.

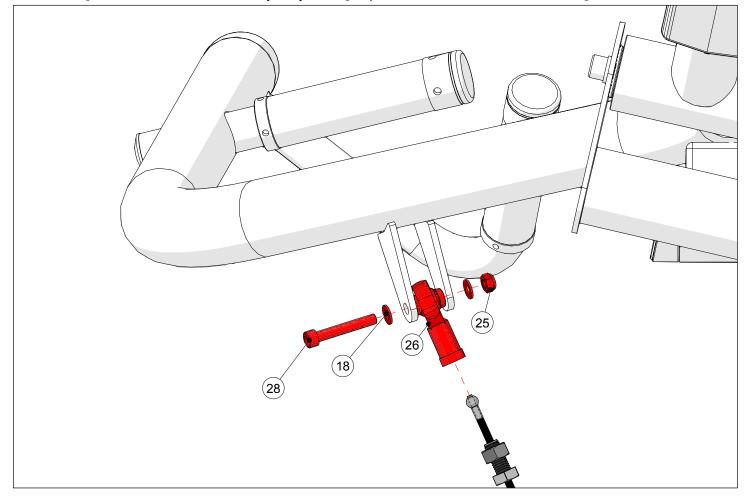


Fully thread cable bolt into tie-rod, then attach to frame. Torque M8 hardware to: 39 N-m/29 ft-lbs.

PART 4: SEAT PAD ASSEMBLY

STEP 1 | BACK PAD AND HEAD PAD ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
2	M10 Flat Washer	4
29	Head Pad	1
30	Back Pad	1
31	M10 X 75L SHC	4

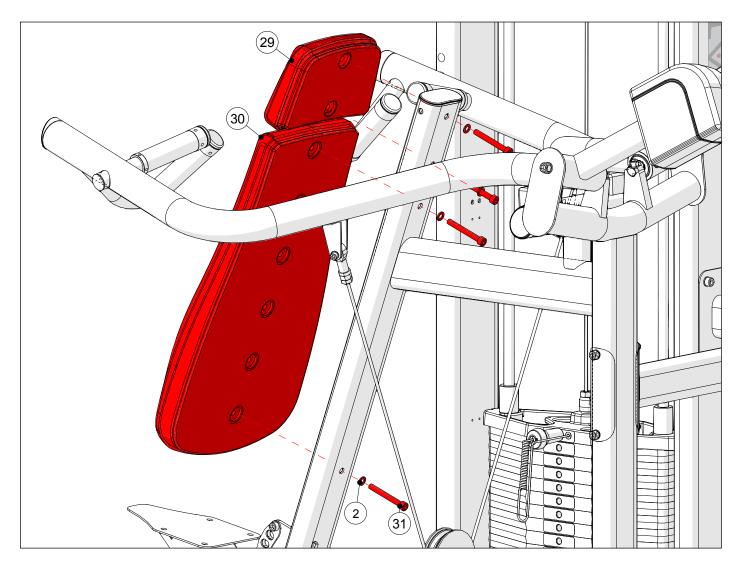


Install the head & back pads as shown. Tighten to 57 N-m/41 ft-lbs.



PART 4: SEAT PAD ASSEMBLY

STEP 2 | BOTTOM PAD ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
32	Bottom Pad	1
33	M10 X 20L Hex Bolt	4

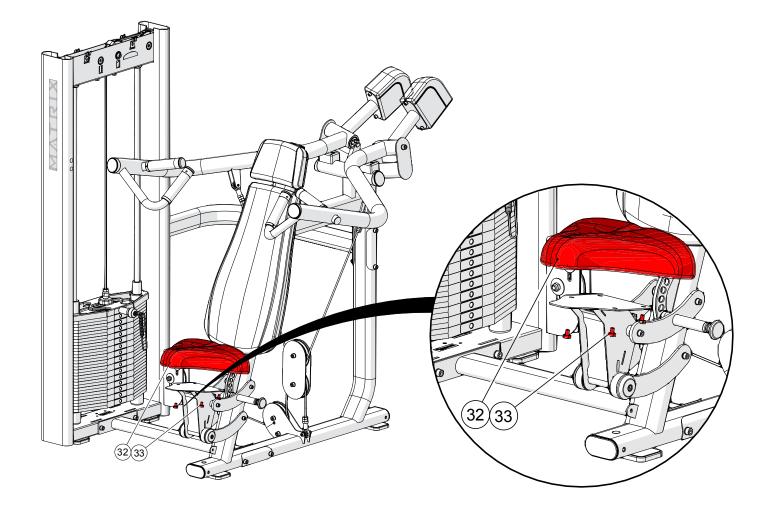

Install the seat pads as shown. Torque to 57 N-m/41 ft-lbs.



STEP 1 | SHROUD ASSEMBLY ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
34	Front Shroud	1
35	Rear Shroud (Not shown)	1

Position hangers in their lowest position 34 -VW \oslash W ADDITION 0

Install the weight stack shrouds as shown.

0 0


0

0

PART 5: PLASTICS ASSEMBLY

STEP 2 | TOP CAP ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
36	M8 X 25L SHC	4
37	M8 Flat Washer (20 mm diameter)	4
38	Тор Сар	1

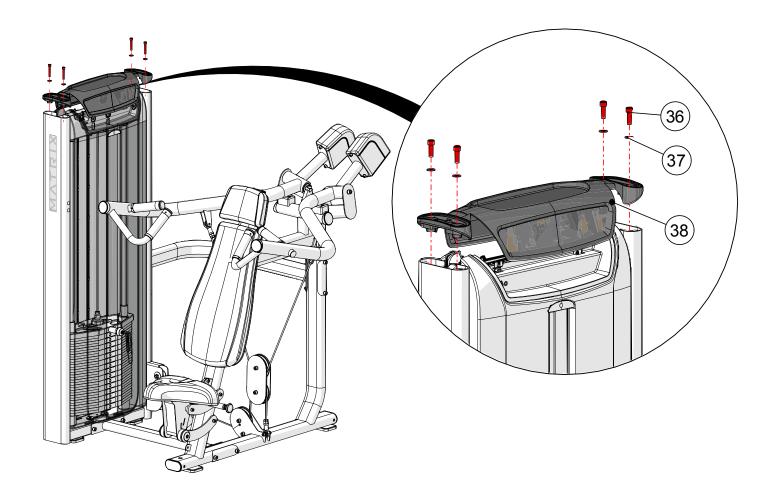

Install the top cap onto the weight stack as shown. Torque to 17 N-m/147 in-lbs.

STEP 3 | TOP CAP COVERS INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
39	Top Cap Cover	2

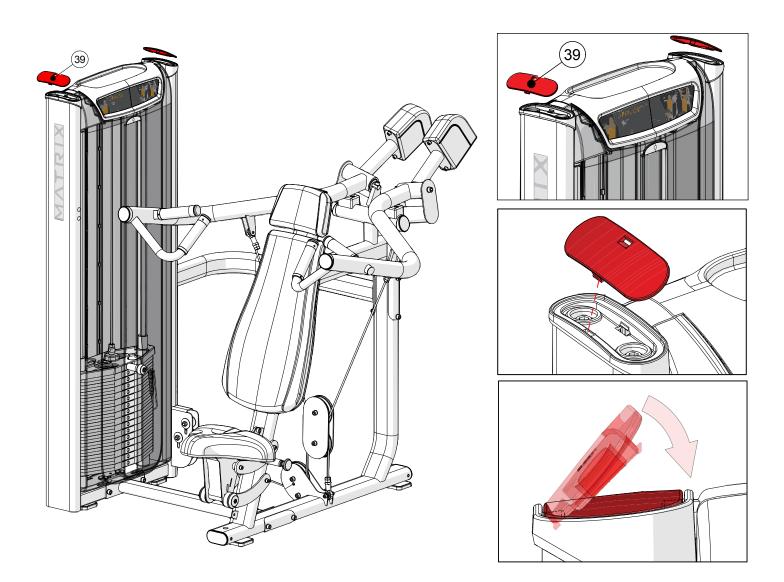


Install the top cap covers.



PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
1P	Wing	1
2P	Rep Counter	1
3P	Towel Hook	1
4P	ASG Push Grip	4
5P	Premium Pullpin	1
6P	Seat Assist Gas Shock	1
7P	M10 Nylock Nut	1

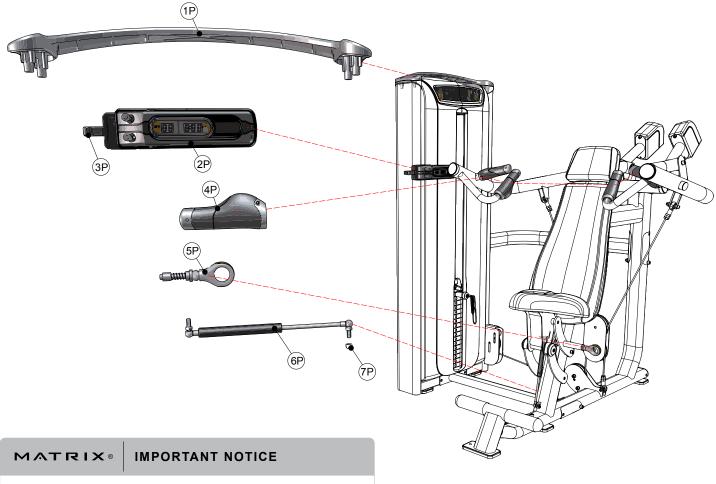




PLEASE NOTE:

Be sure to remove the insulating sheet when installing the Rep Counter.




STEP 1 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES


Rep Counter - Magnet

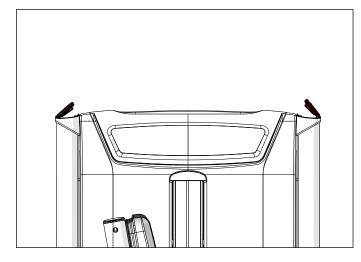

- 1. Remove the (2) top cap covers using a flat blade screw driver.
- 2. Remove the (4) M8 bolts and 20 mm diameter washers that hold the top cap to the weight stack frame.

Top cap covers, 20 mm diameter washers & M8 screws can be discarded

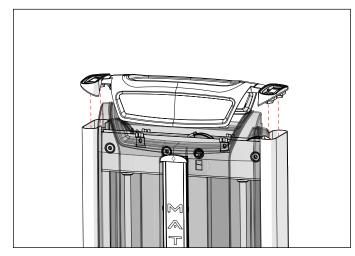

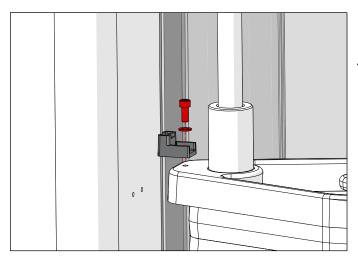

3. Remove top cap and rear shroud.


4. Assemble the Repetition Counter magnet holder to the headplate using the M5 X 12L bolt and M5 washer provided with the kit.

Holder must be mounted on thes same side of the weight stack as Rep Counter



STEP 2 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

Rep Counter - Sensors

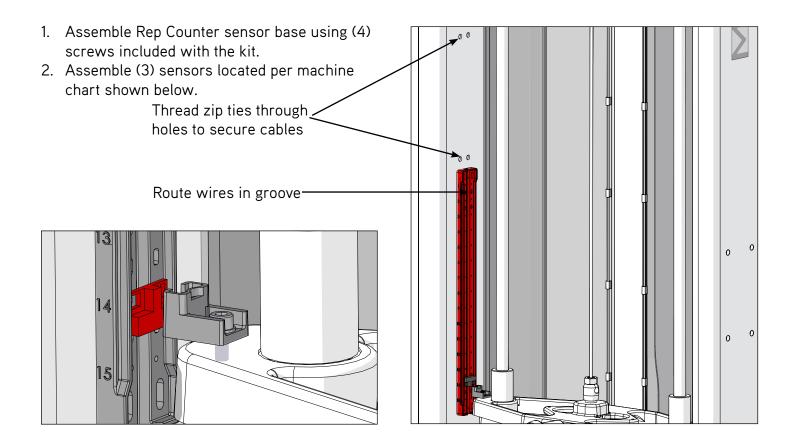

Machine	Sensor Locations (Sensor "A" = Top, "B" = Middle, "C" = Bottom)
Chest Press	A2, B7, C13
Shoulder Press	A1, B4, C13
Leg Extension	A1, B7, C13
Seated Leg Curl	A6, B10, C13
Leg Press	A6, B10, C13
Lat Pulldown	A1, B3, C13
Triceps Press	A5, B8, C13
Seated Row	A1, B4, C13
Bicep Curl	A6, B8, C13
Hip Add/Abduction	A7, B11, C13
Pec Fly/Rear Delt	A7,B 9, C13
Abdominal	A8, B10, C13
Back Extension	A6, B8, C13
Glute	A2, B7, C13



STEP 3 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

Rep Counter




Remove and discard hole caps using caution not to scratch the paint.



 Attach plug to Rep Counter.
 Assemble Towel Hook (3P) and Rep Counter (2P) using the M8 X 35L SHC bolts provided.

> Rep Counter wires must be routed through the center of the Towel Hook

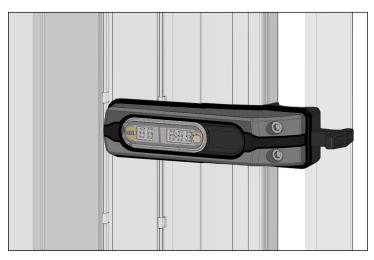


4. Torque bolts to 17 N-m/147 in-lbs.




STEP 4 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

Wing

Assemble the wing (1P) as shown using the M8 hardware provided with the kit. Tighten to 39N-m (29 ft-lbs.).

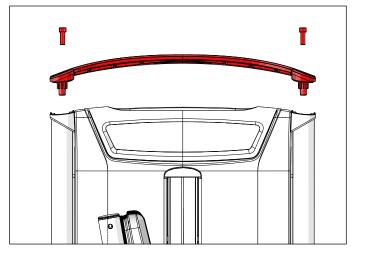

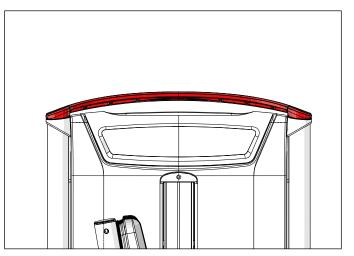




134 Degrees

STEP 5 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

ASG Grips

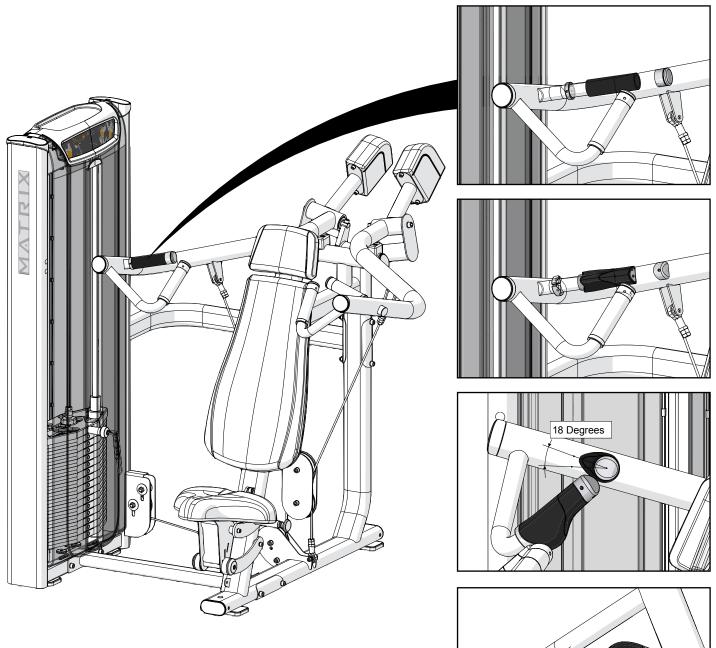


Remove the end caps using a 3 mm Allen wrench. 2. Cut off and discard the grips. 3. Remove inner collars with a 3 mm allen wrench.
 Assemble the ASG grips (4P) as shown; lock inner collars using a 4 mm Allen wench (torque to 8 N-m/5 ft-lbs.), and a 3 mm Allen wrench to secure the end caps. 5. Orient ASG grips as shown.



STEP 6 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

Pull Pin

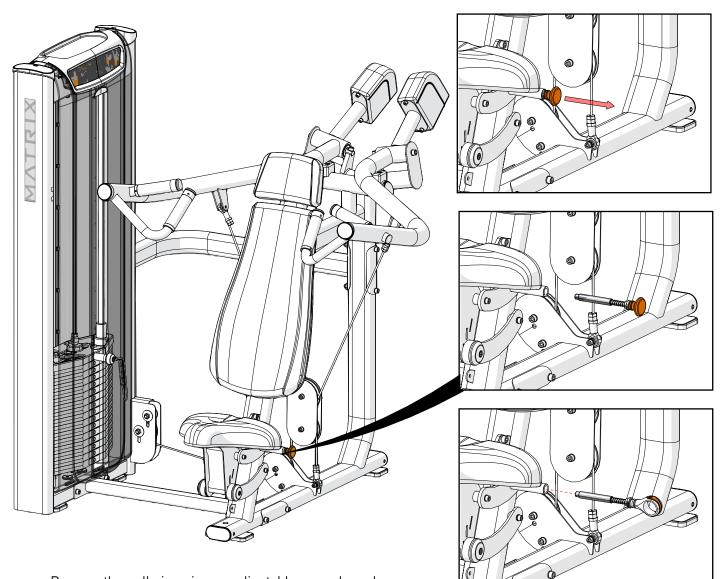



Remove the pull pin using an adjustable wrench, and replace with the Premium pull pin (5P).





STEP 7 | PREMIUM KIT ASSEMBLY INSTRUCTIONS & NOTES

Gas Shock

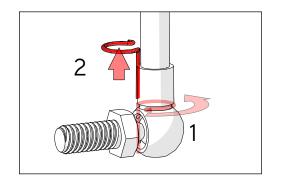


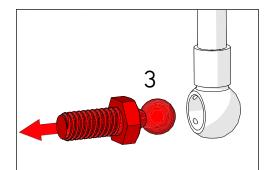

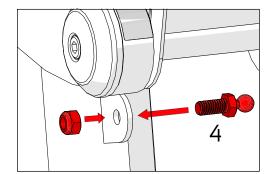

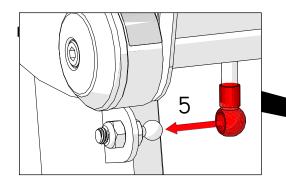

Disassembly and assembly for both ends of shock (Only one end is shown)

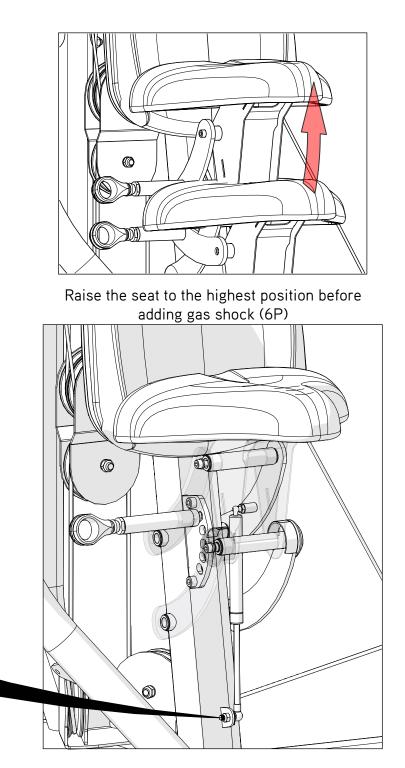


Shock must be positioned as shown with gas cylinder above piston rod

PART 7: SHORT USER KIT ASSEMBLY

SHORT USER KIT ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
1SK	M10 X 18L SHC	1
2SK	M10 Flat Washer	4
3SK	Coupler Plate	2
4SK	M10 X 18L Hex Bolt	2
5SK	Foot Rest	1

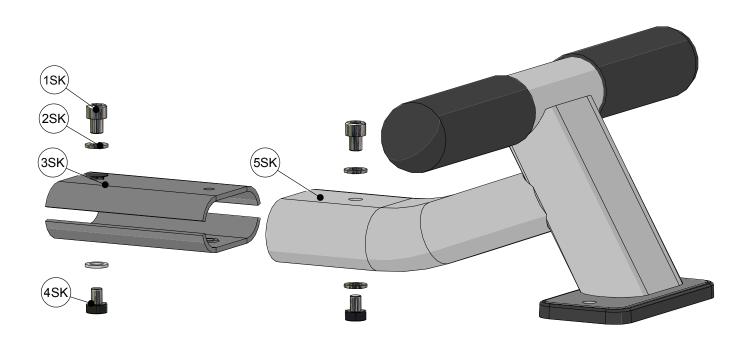



PART 7: SHORT USER KIT ASSEMBLY

STEP 1 | SHORT USER KIT ASSEMBLY INSTRUCTIONS & NOTES

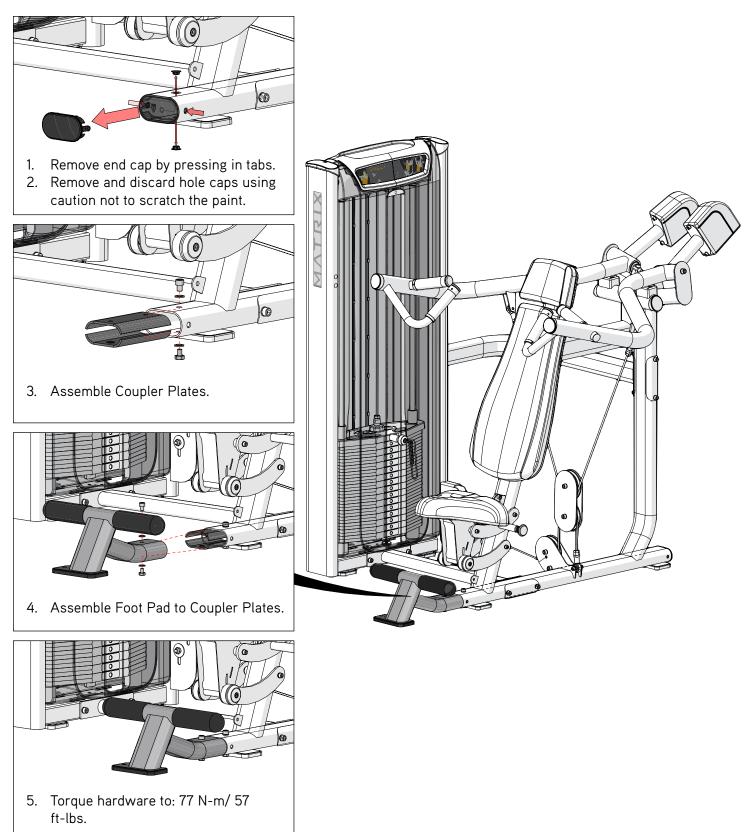



Matrix Fitness 1600 Landmark Drive Cottage Grove WI 53527

matrixfitness.com Toll-free 866.693.4863 Facsimilie 608.839.8687